HOME DECORATORS

collection

ARTISAN SINK CABINET 26"W

HDC #: 04262 MFG #:AT7082

Carton A

Parts Check List

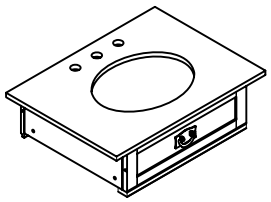

① Top Frame - 1

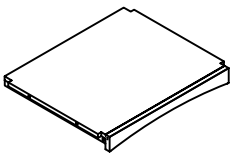

② Bottom Frame - 1

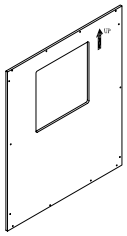

⑦ Back Panel-1

HOME DECORATORS

collection

ARTISAN SINK CABINET 26"W

HDC #: 04262 MFG #:AT7082

Carton B

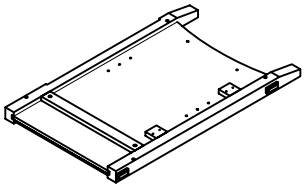

③ Left Side Panel - 1

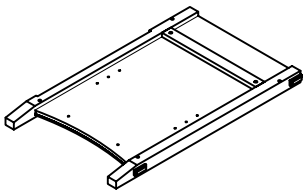

④ Right Side Panel - 1

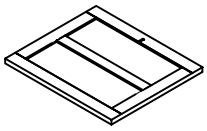

⑤ Door - 1



⑥ Adjustable Shelf - 1

HOME DECORATORS collection®

ARTISAN SINK CABINET 26"W

Assembly Instructions

HDC #: 04262 MFG #:AT7082

Please read over the instructions; it will be a time-saver in the long run.

Note: Before Assembly,please be sure to work on a soft flat surface to avoid any damage to the finish.

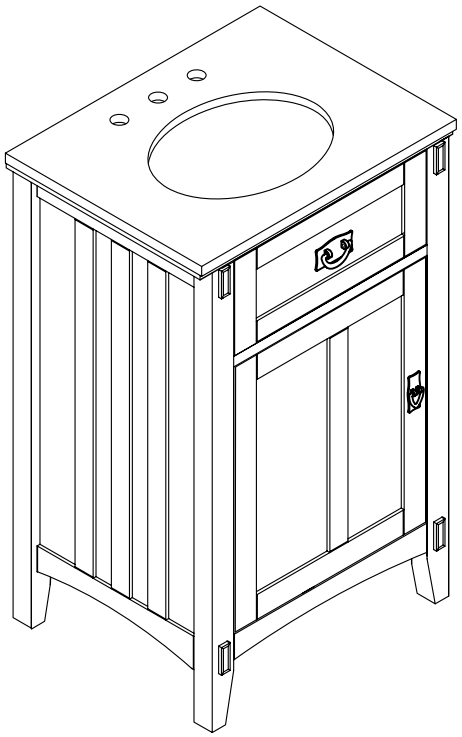

PRODUCT SPECIFICATION:
1. RUBBER SOLID WOOD FRAME
2. LIGHT AND MACINTOSH OAK CLOR FINISH
3. BLACK MARBLE TOP PRE-ASSEMBLED
4. 18” UNDERMOUT CERAMIC BASIN
5. FAUCET NOT INCLUDED
6. (26”W x 20.5”D x 34”H) INCH
7. N.W.: 112LBS G.W.: 130 LBS

Parts Check List

Please remove all the parts carefully from the box.Thoroughly clean all wood surfaces to remove dust and dirt that may have settled onto the finish.

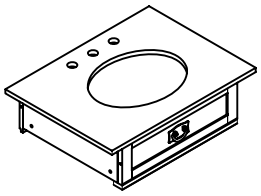

① Top Frame - 1

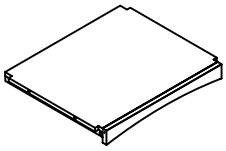

② Bottom Frame - 1

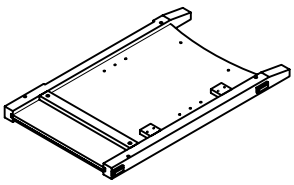

③ Left Side Panel - 1

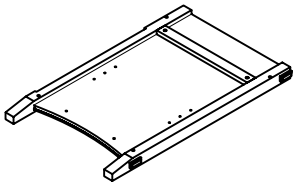

④ Right Side Panel - 1

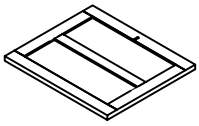

⑤ Door - 1

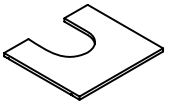

⑥ Adjustable Shelf - 1

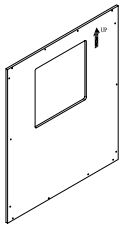

⑦ Back Panel-1

Hardware Check List

Please take all the hardware listed below out of the hardware bag.

A 

Allen Bolt - 8 (Ø1/4"×1-1/4"L)

F

Glue - 1(10g)

K 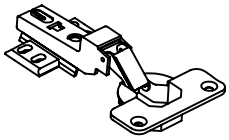

Hinge - 2

B

Lock Washer - 8 (Ø1/4")

G

Door Hand Pull - 1

L 

Flat Head Screw - 12
(Ø7×16mm)

C

Flat Washer - 8 (Ø1/4"×16D)

H

Long Bolt - 2(Ø5/32"×5/8")

M

Round Head Screw - 14
(#6×14mm)

D 

Allen Wrench - 1

I 

Shelf Support - 4

N 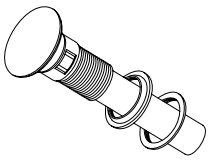

Sink Drain - 1

E

Wood Dowel - 8
(Ø8×30mm)

J

Plastic - 1

1. Fill the middle holes on both Top Frame(1)、Bottom Panel(2)、1/4 with Glue(F). Then insert Wood Dowels(E).
   See figure below:

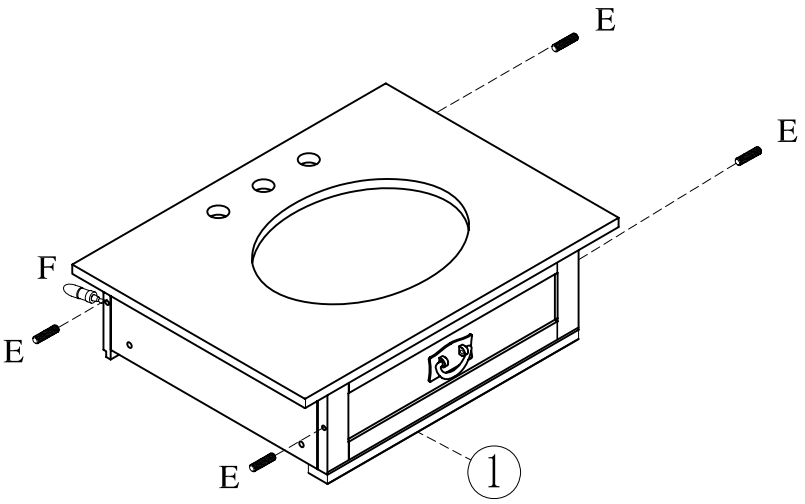

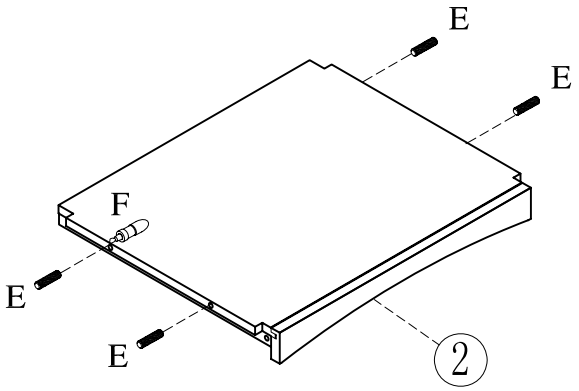

2. Attach Side Panel(3&4) with Allen Bolts(A) through Lock Washers(B)、Flat Washers(C) to Top Frame(1) and Bottom Panel(2) by Allen Wrench(D). Attach Plastic(J) to Top Frame(1).
See figure below:

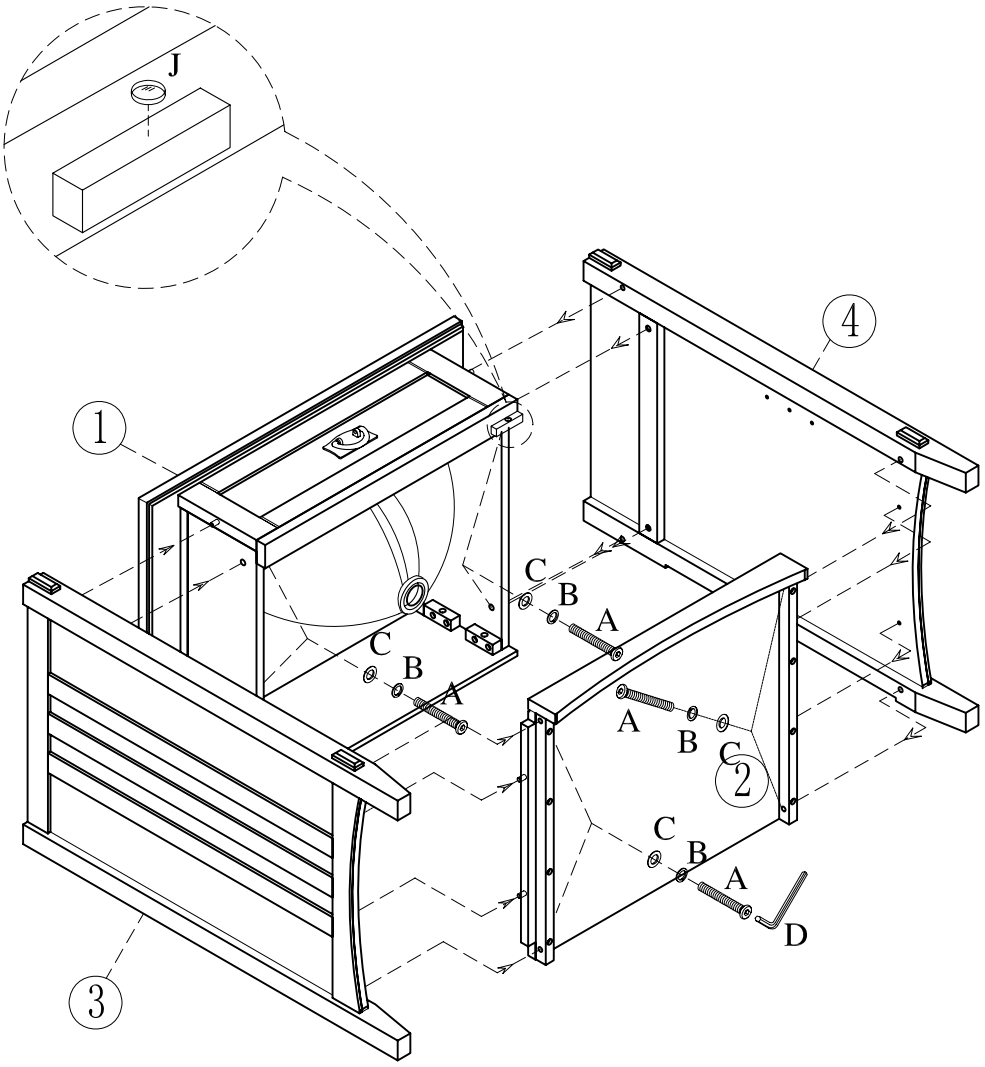

3. Take out plastic cover.
4. Attach Sink Drain(N) to sink. See figure below:

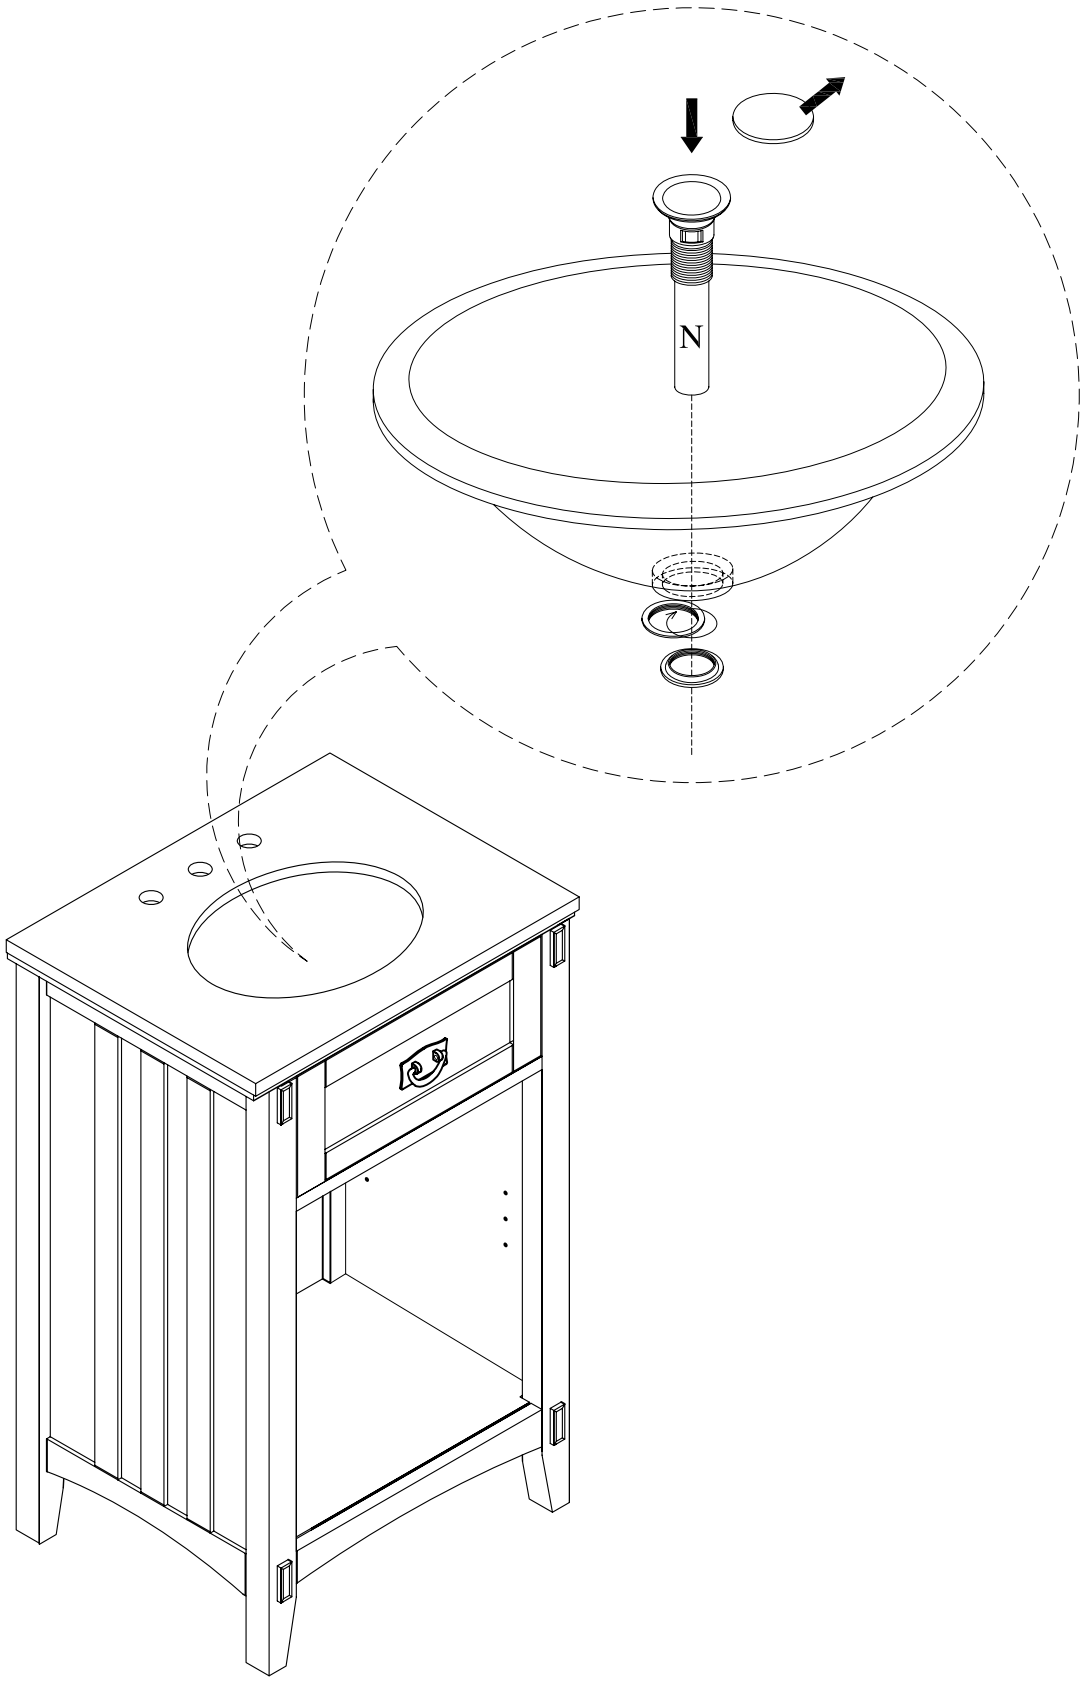

5. Attach Hinges(K) to Doors(5) with Flat Head Screw(L) . See figure below:

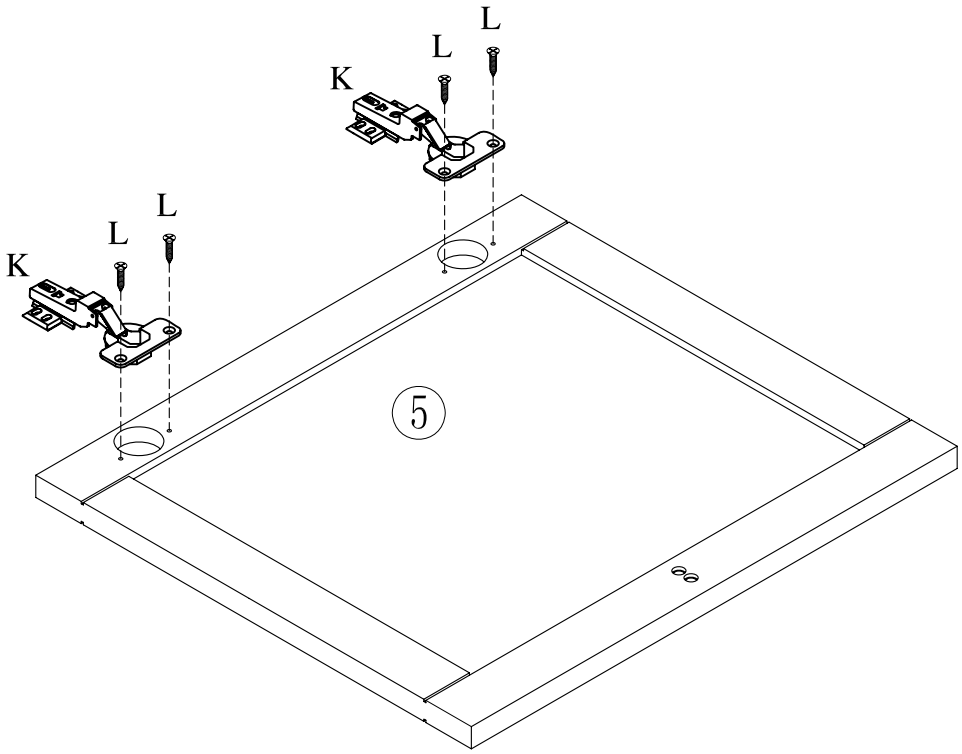

6. Attach Door(5) to the Left Side Panel(3) with Hinge(K) and Flat Head Screw(L) . Attach Door Hand Pull(G) to Door(5) with Long Bolts(H) by screwdriver .
7. Place Shelf Support(I) into the holes in Side Panel(3&4) . Place Adjustable Shelf(6) onto the Supports(I) . See figure below:

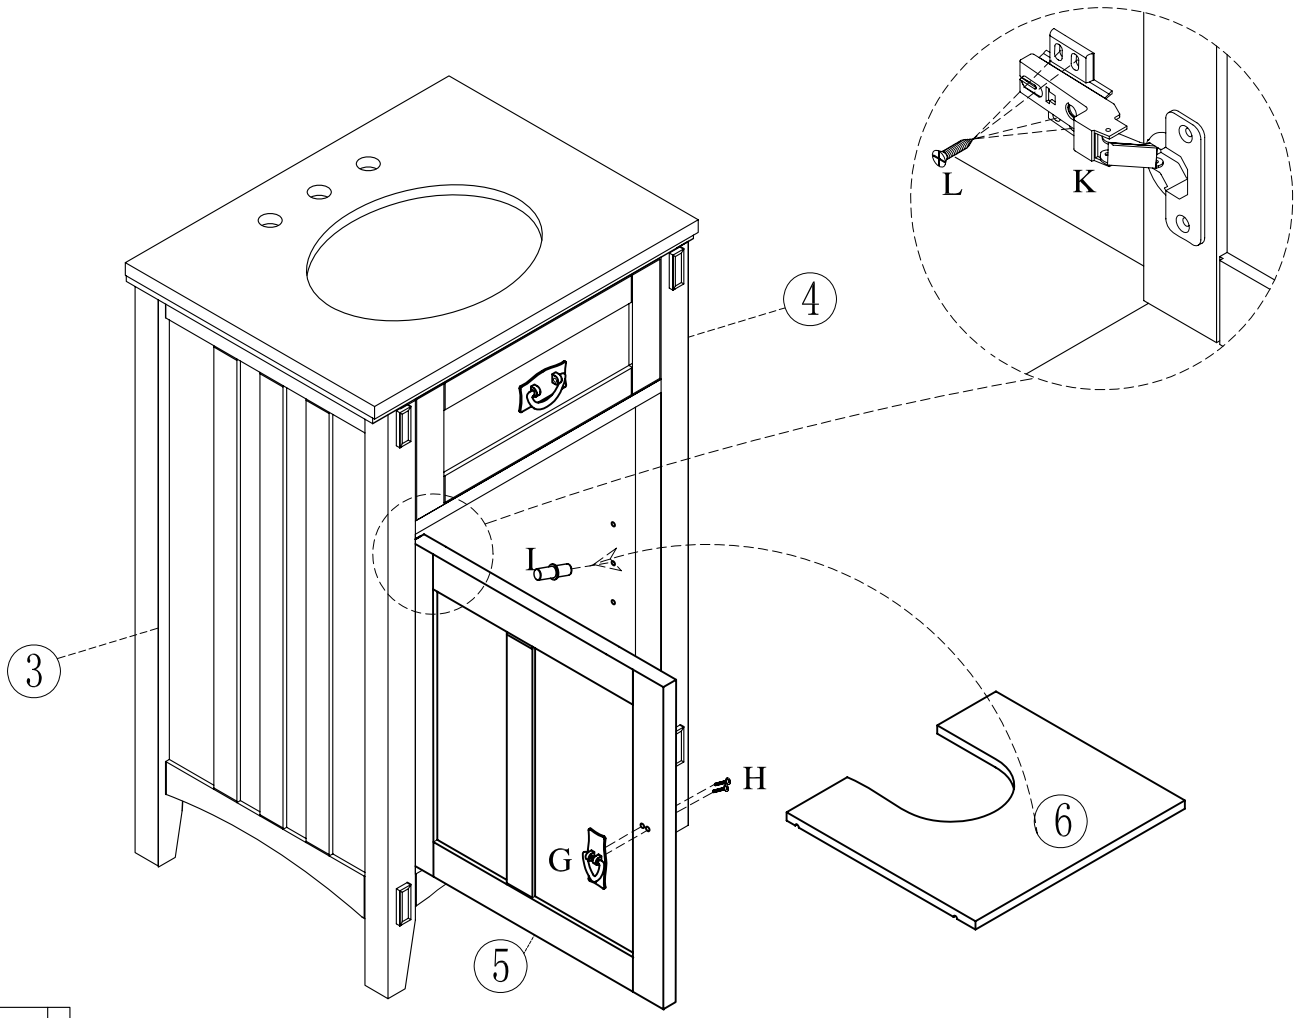

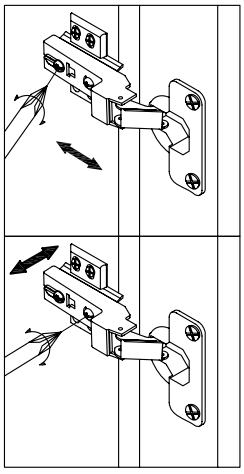

8. Before attaching back panel, be sure the space around the door is even. If not even, shift the unit either right or left, whichever is needed, until the space is even. Then attach the Back Panel (7) with Round Head Screw(M) . See figure below:

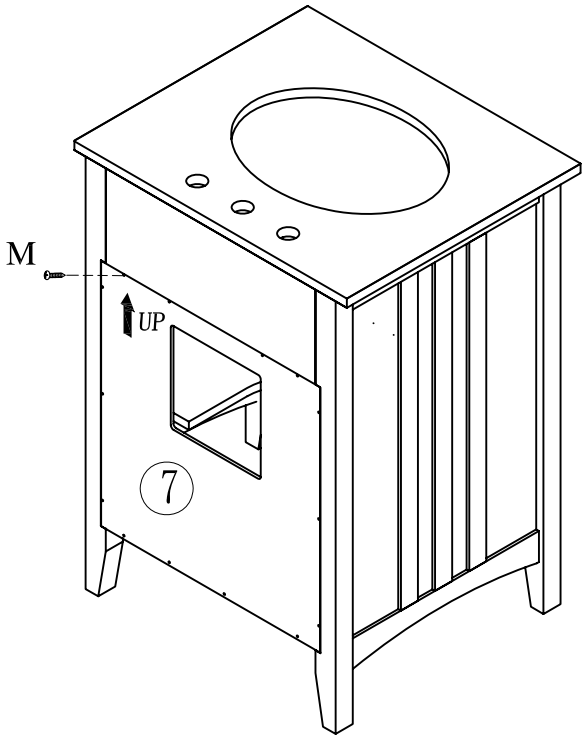

Assembly is now complete!

HOME DECORATORS collection®

Maintenance of Natural Stone

Granite countertops are surprisingly resilient to stains, and practically impossible to scratch. However, as a preventative measure, any spills on Granite surfaces should be wiped up within a reasonable amount of time. Don't let liquid sit on the stone overnight. Granite is most prone to staining by oil and acid, so be sure to blot these spills up as soon as they happen. Follow up by cleaning the stone with a mild non-abrasive soap and water.

In bathrooms specifically, Granite tends to attract soap scum, just like man-made tile. Rinse vanity top with clean, hot water frequently.

The use of sealers is also a powerful preventative measure. Your stone was sealed at the factory, but reapplication is necessary over time. How often is determined by the quality of the sealer used, and the frequency of use. We recommend using a penetrating sealer for bath areas, as a food-safe sealer is typically not necessary.

If stains and scratches DO occur, there are many things you can do as a consumer to remove them. Remove oil based stains with acetone, mineral spirits, or ammonia. Organic stains like coffee, tea, or juice can be removed with hydrogen peroxide, mixed with a few drops of ammonia.

Water spots or rings are the most common problem with bath vanities, and are caused by minerals left behind when water evaporates. These can be removed by buffing the spots gently with 00 gauge steel wool. Likewise, small nicks and scratches can often be removed the same way. Larger scratches, chips, and resilient stains may require professional help. Please contact your local stonemason for details.

Remember the following list of DOs and Don'ts:

~**DO** use preventative cleaning measures to keep your stone pristine.
~**DO** use sealers, applied according to the product specific directions.
~**DO** blot spills quickly, and wash with mild soap and warm water
~**DON'T** use harsh bathroom cleaners or grout cleaners on any natural stone.
~**DON'T** worry if you get a significant stain or scratch that your stone investment is ruined. Virtually anything can be fixed with professional help.